


Important
information
about your Caper®
multitask
chair

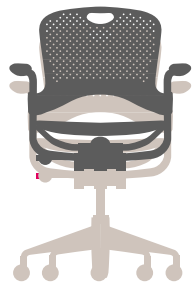

 **HermanMiller**



Seat Height

Red button in center of round black knob under right side of seat

To raise: While raising your weight off chair, press button.

To lower: While seated, press button.



Tilt Tension

Round black knob under right side of seat

To increase: While seated, with weight forward turn knob clockwise.

To decrease: While seated, with weight forward turn knob counterclockwise.

Depending on the desired tilt resistance, a number of turns may be required.

Maintenance/Cleaning

Molded Seat and Back

Wash injection-molded thermoplastic seat and back with a soft cloth soaked in mild detergent and warm water. Rinse thoroughly and dry with a soft cloth.

FLEXNET™ Seat

Dust or vacuum seat as needed using a soft vacuum-upholstery attachment.

Base and Frame

Wash aluminum base and frame with a soft cloth soaked in mild detergent and warm water. Rinse thoroughly and dry with a soft cloth.

A periodic inspection of chair components and fasteners should be made to ensure that the chair is structurally intact and functioning properly. Damaged and broken parts should be replaced and loose fasteners tightened.

Note: Caper chairs are not intended for outdoor use.

For more information about our products and services or to see a list of dealers, please visit us at www.hermanmiller.com or call (800) 851 1196.

© 2001 Herman Miller, Inc., Zeeland, Michigan Printed in U.S.A.
Part No. 183676-B O.WC6201

® **Herman Miller**, and Caper are among the registered trademarks of Herman Miller, Inc.
FLEXNET is a trademark of Milliken & Co.