



'LIFT & LOCK' SEAT DEPTH ADJUSTMENT

Gently lift up the handles on the left and right sides of the seat to disengage the locking seat depth adjustment. Slide forward or back into the proper depth for use (one of 6 positions), then release downward to lock the seat.

Repeat these steps to provide more or less depth as required.

The illustration shows a cross-section of the mechanism.