

# *Cruise chair*

Intelligent Cruising

## Instructions for Use

Thank you for purchasing Okamura “Cruise Chair” product. This guidebook will enable you to properly use the “Cruise Chair” product. Thoroughly read this guidebook and fully understand its content before using the product. Also, we recommend having this handbook nearby whenever using the product.



**okamura**

OKAMURA CORPORATION

INTERNATIONAL SALES & MARKETING DIVISION  
2-14-27, Akasaka, Minato-ku, Tokyo 107-0052, JAPAN

Tel : +81-3-5561-4085 Fax : +81-3-5561-4086

<http://www.okamura.co.jp/>

G97987  
2013-06

**okamura**

## Safety Instruction (Keep this operation manual)

### Symbol indications

Various symbol marks are used in this instruction manual and displayed on the products to show correct and safe usage and to avoid harm to you and others or damage to property. Please understand those before reading the main text of this manual.



### Caution

User must follow this instruction to prevent from accidents and injuries, or damages to their property.

## Caution


### ● Avoid rough handling and use for purposes other than originally intended.

- Using the chair as a trolley by loading can pose a danger of rollover accident or falling of load.
- Do not stand up on the chair or sit on the front edge of the seat or armrest. Failure to observe this precaution may cause you to fall, resulting in injury.

### ● Gas lift replacement and handling should only be carried out by the trained personnel.


### ● Do not disassemble or repair on your own. Please contact our official dealers when needed.

### ● Do not put your fingers or hands into the spaces or moving parts of the product. This could lead to injuries.

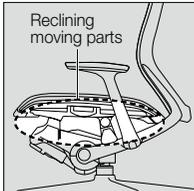

### ● Regarding casters

- Casters are consumable goods. We carry out replacement of casters for a fee, please contact our sales representative with inquiries.
- For hard floors made of ceramic, stone, tile or wood, use soft.
- For soft floors using carpet or rug, use hard casters.

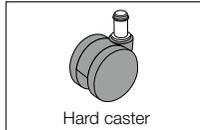

Hard caster



Soft caster

## Installation

Please follow instructions below. Failure may cause serious damage to the product.

### Use the product indoors.

- Do not use outdoors or places with water, as exposure to moisture could result in problems such as warping or the growth of mold.

### Avoid placing the product in places exposed to high temperatures, humidity, or exceptional dryness as this can result in warping, color changes, or the growth of mold.

### Avoid placing the product where it will be directly exposed to heat or moving air such as by stoves, air conditioners, or the like as this could result in warping or color changes.

### Avoid keeping the product in direct sunlight as this could result in warping or fading of colors due to exposure to the sun.

- Always use curtains, blinds, or the like to protect the product from direct sunlight when installing it next to windows or the like.

### Install the product so that its level surface is maintained.

- Maintain the level surface of the main unit when installing the product. If the product is installed without its level surface maintained, the main unit may become skewed, resulting in malfunction of moving parts.

## Appropriate ventilation measures

- Many chemical substances will be released by the product when it is first purchased. Sufficiently ventilate or expose the product to moving air for some time after purchasing it.
- Do not completely close windows when using the product in rooms with conspicuously high temperatures/humidity (the benchmarks for these are temperatures in excess of 28°C and relative humidity in excess of 50%).

## Instructions to Extend the Life of Product


- If the product has become unsteady due to loosening of the bolts or screws during use, retighten them immediately.
- Do not use in places exposed to vapors. This could cause rusting.
- This instruction manual is very important, so store it in an easily accessible location.
- Frequent maintenance of the product during its use is the key to making it at last a long time. Immediately request inspections and repairs (fee required) from our company when the warranty period has expired.
- **Care for plastic parts**  
For daily care, wipe frequently with a firmly wrung-out soft cloth. If the chair is exceptionally dirty, wash with a watered-down mild detergent, then wipe away all the detergent with a damp cloth and finally rub dry with a dry cloth.
- **Care for mesh material and cushion**  
After tapping the mesh section by hand, use a vacuum cleaner to remove the dust. The cushion can not be dry-cleaned, so if it is exceptionally dirty, we recommend replacement with a new one.

## Parts names




\*The headrest (adjustable and fixed) and lumbar support are optional.


## Operating range

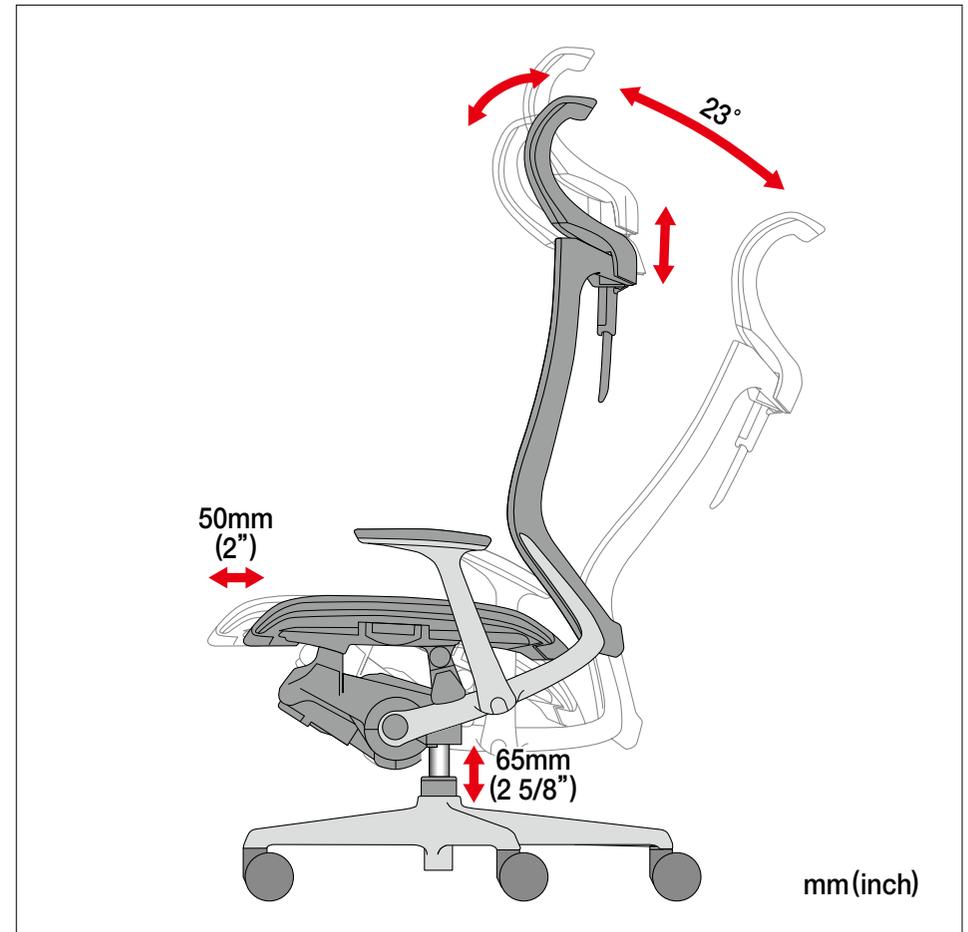

\*Only the adjustable type headrest can be moved.

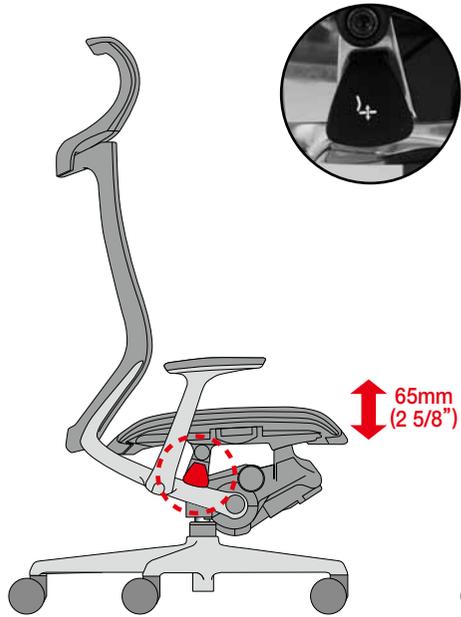


mm(inch)

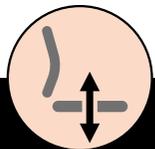


### Seat height adjustment

Operate using the lever on the bottom right of the seat. If the lever is pulled with a person's weight on the seat, the seat will lower and will then lock in place at the position when the lever is released. To adjust the seat height upwards, stop pressing down on the seat and pull the lever.

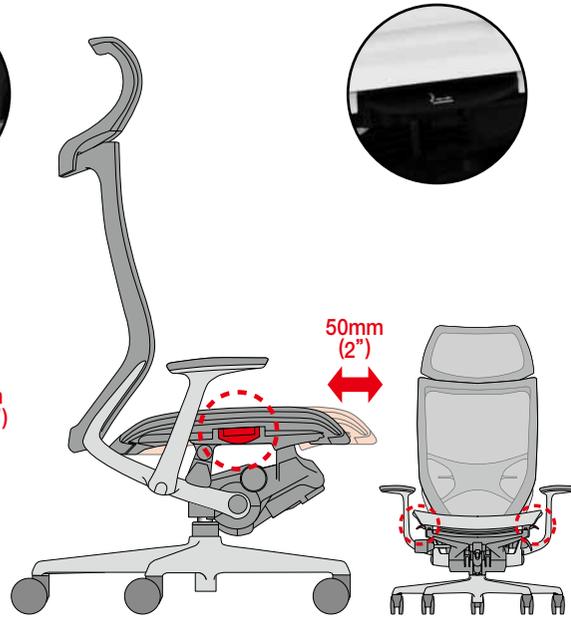


mm(inch)

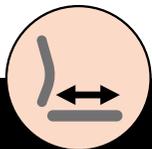

### Seat depth adjustment



With your weight raised slightly off the seat, pull the left and right levers towards the front of the seat upwards and pull the seat slightly upwards to operate. Release the levers once in the desired position.

\*Make sure the position is securely locked before using after adjustment.

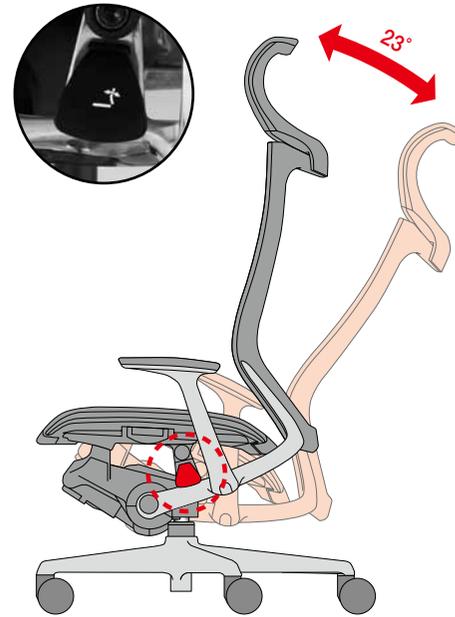

### Reclining lock and release


Adjust the by pulling the lever on the bottom left of the seat. Lean back against the seat and pull the lever at the reclined position to lock the back in place. Pull the lever again to release the lock and return to the free state.

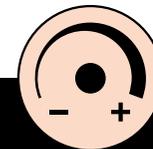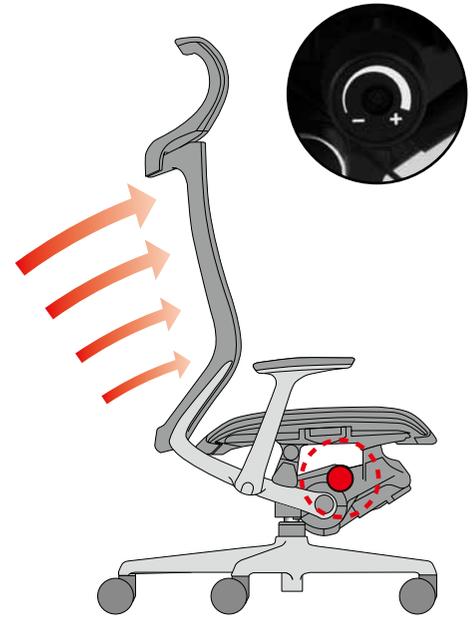

### Reclining resistance adjustment

Turn the lever on the bottom right of the seat in the + direction to increase reclining resistance and in the opposite direction to decrease reclining resistance. Adjust so that it is comfortable for the person sitting.

\*When operating, please to not lean on the back rest and have it in the free locking state.

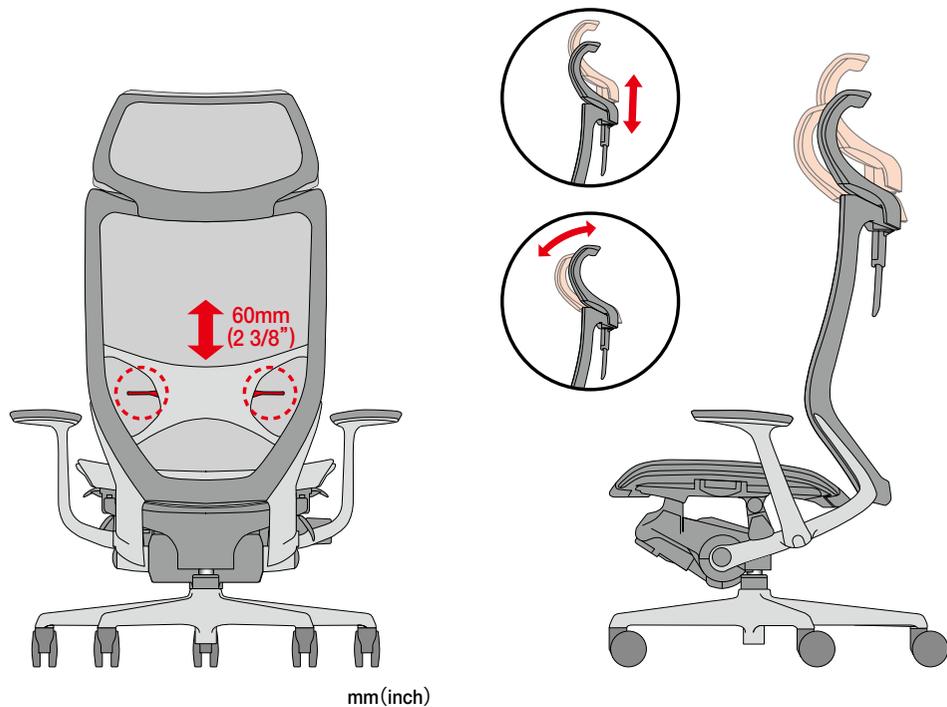

### Lumbar support (option) position adjustment

While seated, move both hands behind the back of the chair, and raise the operation levers on both sides with your back slightly away from the back of the chair.


### Adjustable headrest (optional) height and angle adjustment

The height and angle of the head rest can be adjusted. Hold the cushion section and carefully adjust. Adjust so that it is comfortable for you. The height adjustment is carried out using a ratchet method, raise the ratchet to the highest level to return to the lowest position.

Our staff is done basically to replace the parts. When the exchange, please contact customer service center for orders of replacement parts.


### Armrest (option) replacement methods

- 1) Remove the caps using a flathead screwdriver or other appropriate tool without the arms attached.
  - 2) Attach the armrest from the side using the included 1 bolt (for one side).
- ※ Tools : 6mm hexagonal wrench (Allen wrench)
- 3) Make sure there is no looseness in any of the attached parts.

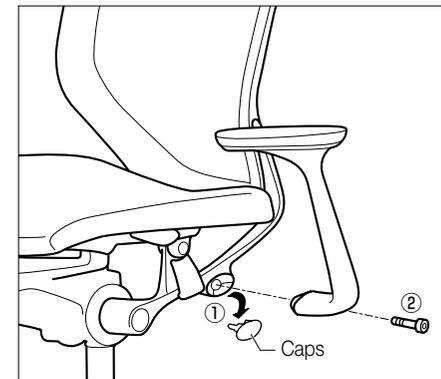


### Lumbar support (option) replacement methods

- 1) While bending the lumbar unit inwards, insert from the back of the chair between the back frame.
- 2) Attach the 4 hooks on the lumbar unit to the grooves in the back frame. Use the attachment guidelines to determine attachment locations.

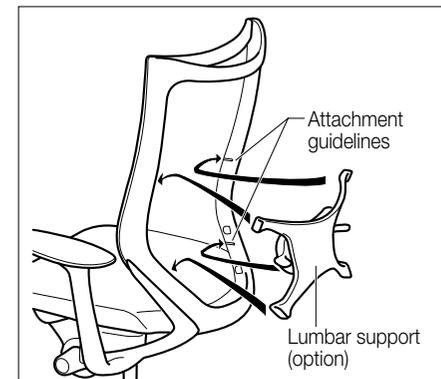



**Fixed headrest (option) replacement methods**

- 1) Use a flathead screwdriver or other appropriate tool to remove the name plate on the top back frame.
- 2) Attach the fixed headrest by aligning the 3 hole positions on the top back frame and then inserting. Make sure it is securely inserted.
- 3) Insert the included screws into the holes on the back of the top back frame and fix the headrest in place using the 2 included screws. Attach the name plate to the headrest.
- 4) Make sure there is no looseness.


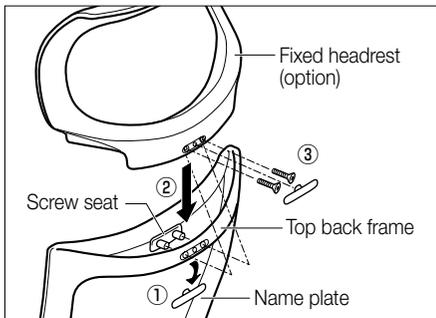


**Adjustable headrest (option) replacement methods**

- 1) Use a flathead screwdriver or other appropriate tool to remove the name plate on the top back frame.
- 2) Attach the adjustable headrest by aligning the 3 hole positions on the top back frame and then inserting. Make sure it is securely inserted.
- 3) Adjust the angle of the adjustable headrest so that it is vertical.

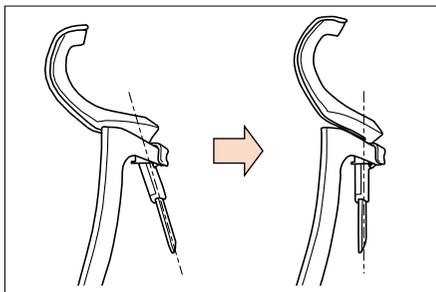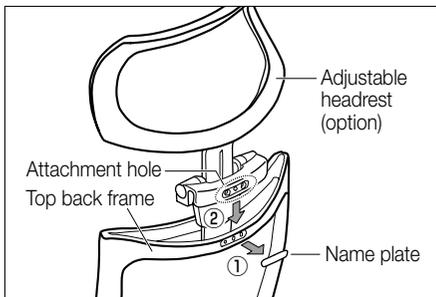

- 4) With the adjustable headrest height set several positions upwards, insert the screw seats between the attachment material and post and insert in the indentation of the attachment material back.
- 5) Use the 2 short (16mm) included hexagon socket bolts to fix the adjustable headrest in place.
- 6) Attach the name plate.

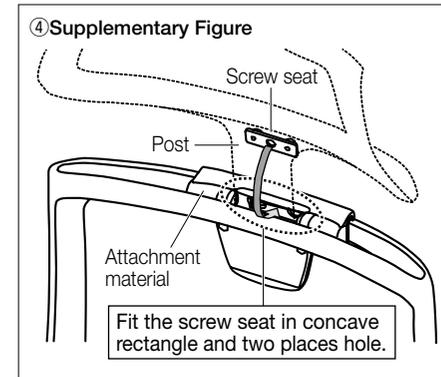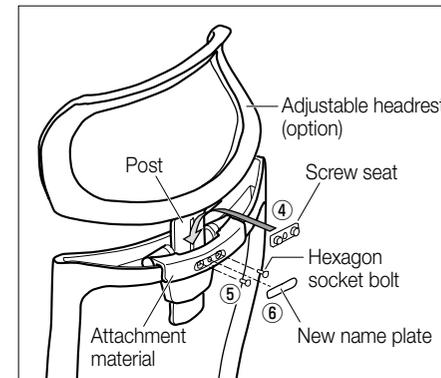


## Part replacement methods

Our staff is done basically to replace the parts. When the exchange, please contact customer service center for orders of replacement parts.

### Adjustable headrest (option) replacement methods


7) While being careful of the "R" and "L" and arrow orientations indicated on the clamping material, insert the attachment material into the square holes on the back of the attachment material. Grip with hands and insert until a "click" sound is heard.

※ If a "click" sound is not heard when inserting by hand, use a flathead screwdriver to insert more securely.

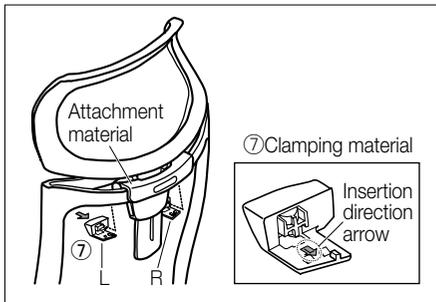


7)a: Insert the tip of a flathead screwdriver approximately 1cm into the square holes on the "▽" marked section of the clamping material (see figure 8).

7)b: Move the screwdriver handle forward to pull the clamping material forward until a "click" sound is heard.

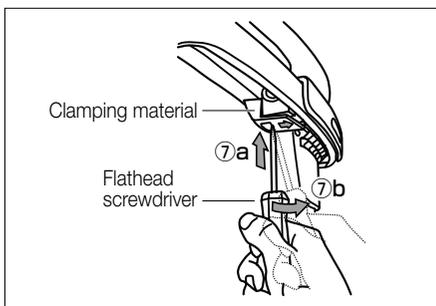

7) Insert the included tapping screws into the holes on the clamping material to fix the clamping material in place.

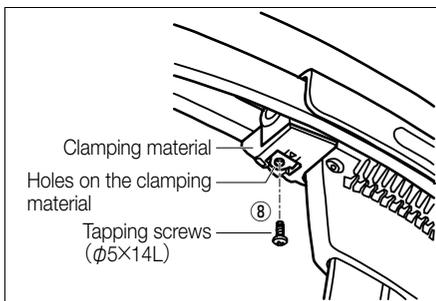

## Materials

Part		Material
Structural parts	Leg / Frame	Die-cast aluminum
	Back shell / Seat shell	Glass reinforced polyamide >PA-GF<
	Armrest	Pad : Polyurethane resin >TPU<, Cover : Polypropylene
	Lumbar support	Polycarbonate >PC<
Cushion material	Headrest	Polypropylene resin >PP<, Glass reinforced polyamide >PA-GF<
	Seat / Cloth	Mold Polyurethane / Polyester
Mesh material	Back	Polyester

※ >○○< indicates the materials of the parts. This information is useful when recycling.

※ Please understand that product specifications might change without prior notification when improvements are made to the product.

## FAQ

Phenomenon	Check	Correspondence
The seat won't rise.	Are you fully sitting when adjusting seat height ?	Adjust seat height without any load on the seat.
	Is seat height in the highest position ?	Seat will not rise over the highest position.
The seat won't lower.	Are you sitting on the front side of seat?	Please sit on center of the seat while adjustment.
	Is seat height in the lowest position ?	The seat will not lower beyond the lowest position.
The seat slide levers do not work.	Are you fully sitting when adjusting seat depth?	Adjust seat depth without any load on the seat.
The backrest won't move.	Is lever under left side of the seat at lock position?	Lift the lever and lean against the backrest.
	The reclining tension adjustment handle is set to a "+" position .	Turn the reclining tension adjustment handle to a "-" position.
Casters do not move smoothly.	Are you using soft casters on rug or carpets ?	Use hard casters on rugs or carpets.
	Is it tangled with lint or wool ?	Remove foreign object or replace the caster.
Casters are slipping.	Are you using hard casters on hard floor such as plastic tile floor ?	Use soft casters.
Chair makes noise.		Please contact our official dealer.